

Feyachi®

PL Compact Laser Sight

User Manual

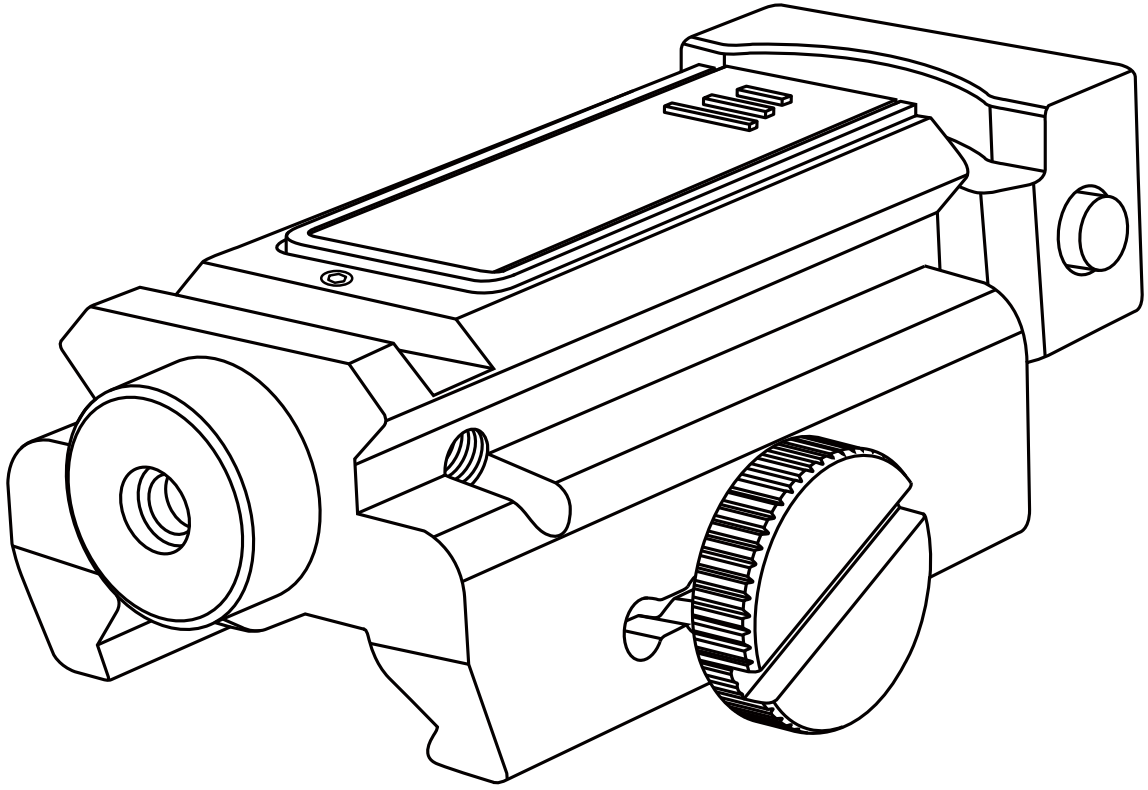


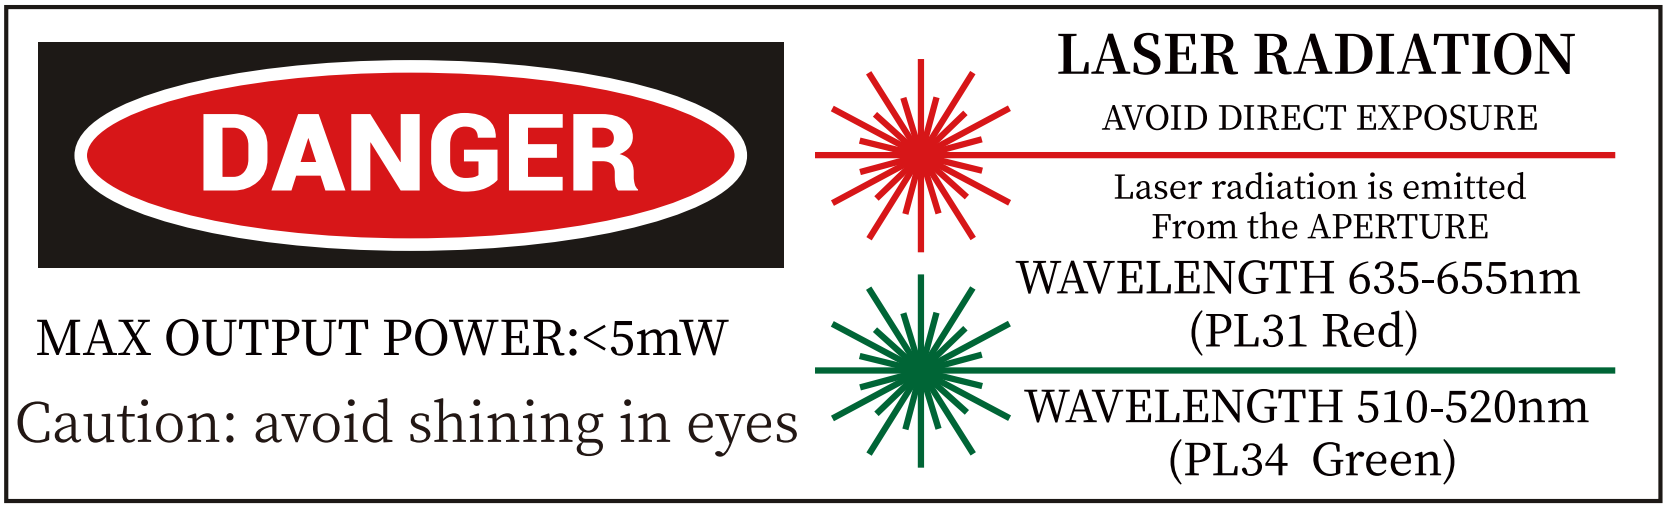

Specification


Output: <5mW
Dimension: 2.4″ L x 1.3″ W x 0.8″ H
Weight: 1.6 oz
Construction: 6061 T6 Aircraft Aluminum Alloy
Finish: Anodized Matte Black
Battery Type: LR44(4)
Battery Life: 2 Hrs (PL31 Red)/1.5 Hrs (PL34 Green)
Wavelength: 635-655nm (PL31 Red)/510-520nm (PL34 Green)

Overview

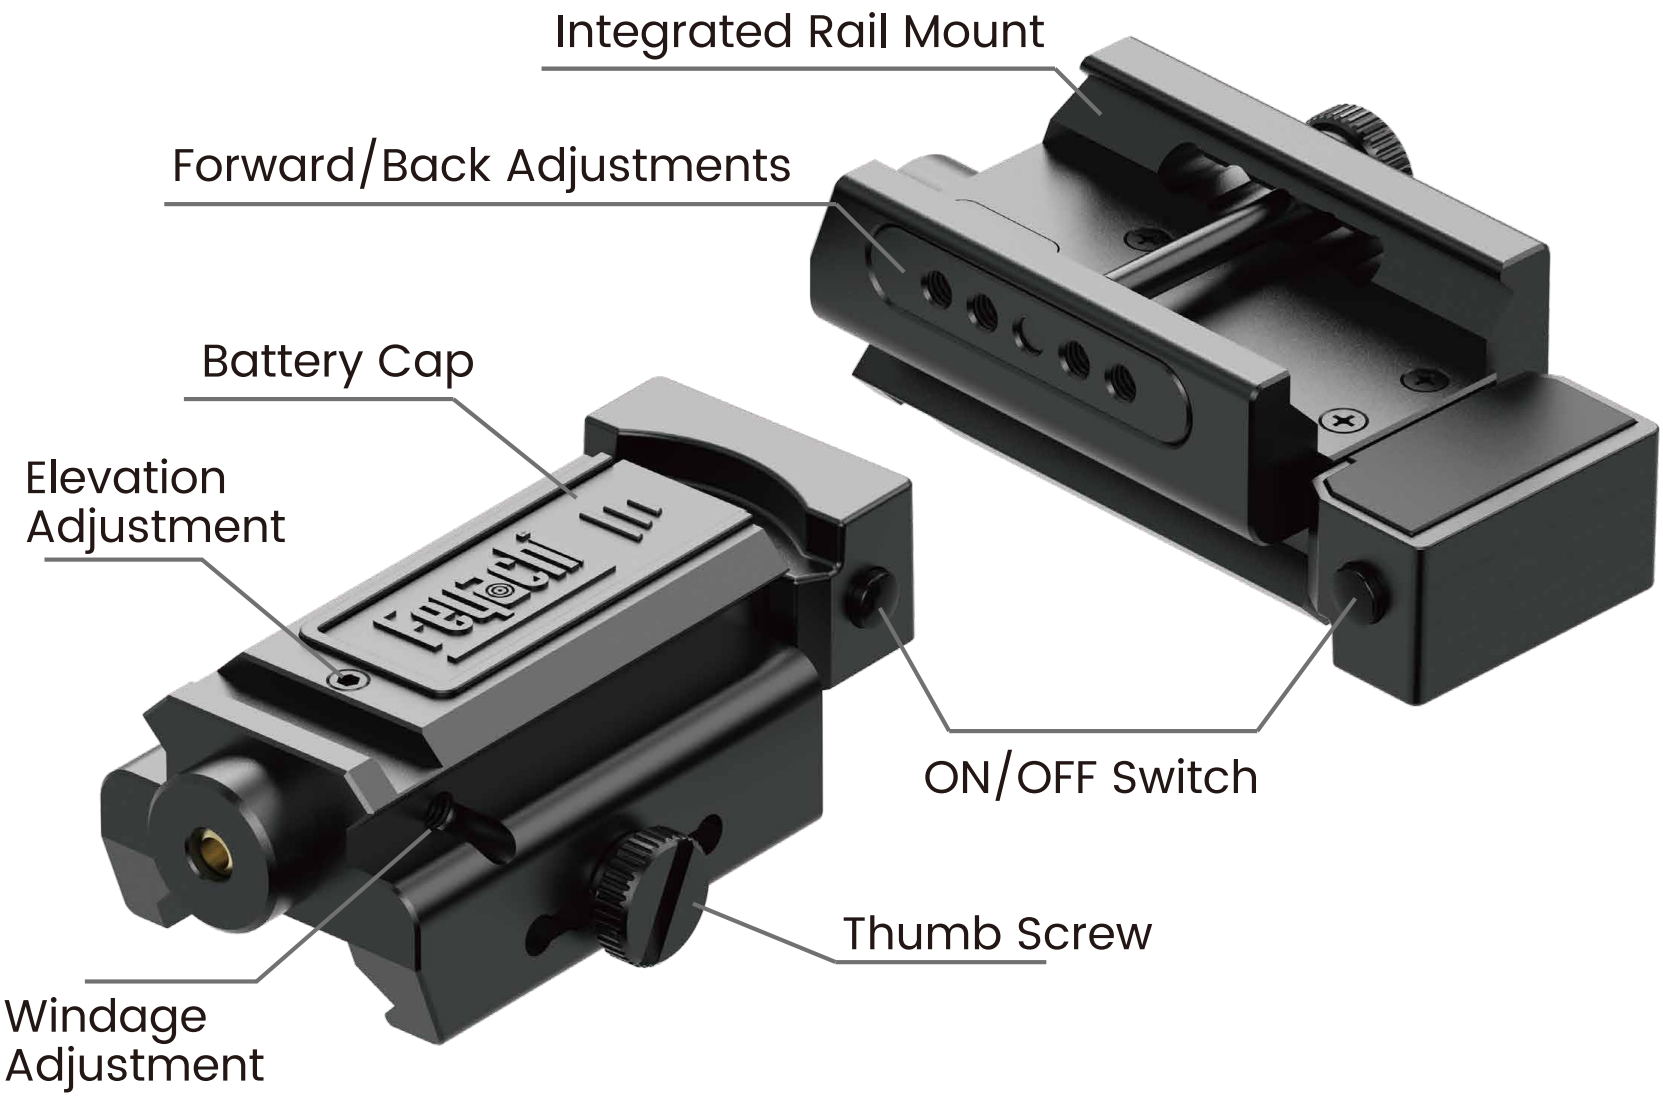
Integrated Rail Mount
Forward/Back Adjustments
Battery Cap
Elevation Adjustment
ON/OFF Switch
Thumb Screw
Windage Adjustment

Battery Installation

Slide battery cap towards the back and flip open. Insert two LR44 batteries as marked inside.

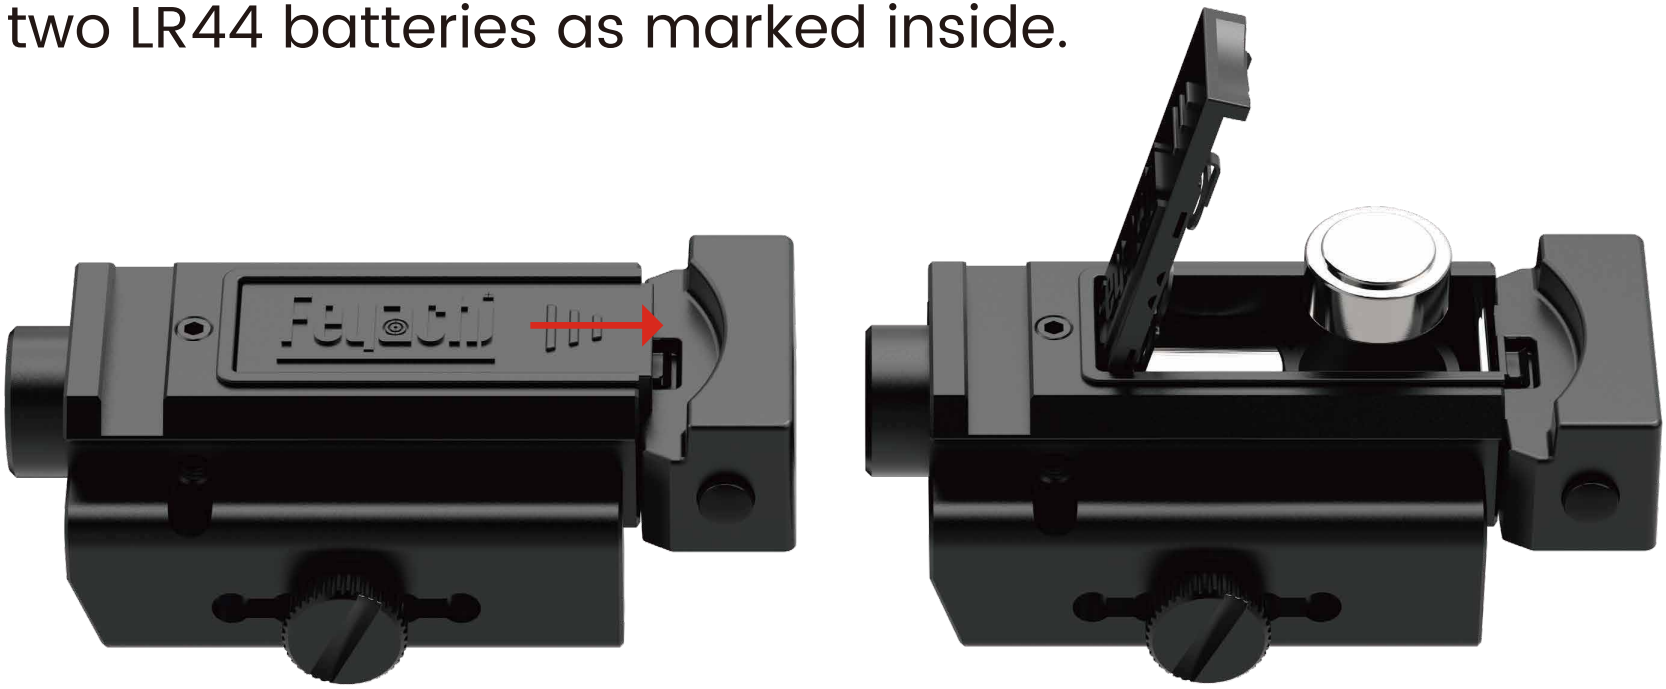

Rail Installation

Attach the laser sight to your rail by choosing the screw position best suited for your gun that will allow the sight to be as close to the trigger guard as possible and tighten

screw.



ZEROING

After the laser sight is mounted to your rail, you will need to zero in the laser.

1. While following necessary safety precautions, fire five rounds at a target to determine the point of-impact.
2. Using the provided Allen wrench, adjust the laser to the bullet's point of impact.
3. Continue to readjust the windage and elevation until the laser is zeroed.



Windage



Elevation

Inside the Box

Laser Sight	LR44 Battery(4)
Screw Pick	User Manual

Warranty

Within 12 months of purchase: Return to Feyachi for repair or replacement. This warranty does not cover normal wear and tear, modifications, misuse, disintegrations, negligence, accidents, improper maintenance, or repair by anyone other than an Authorized retailer or Feyachi itself.

Customer Service

info@feyachi.com
www.feyachi.com
www.facebook.com/feoutdoor

Troubleshooting:

Q: What if the PL-31/PL-34 I received does not work?

A: Please first check if the positive and negative terminals of the battery are placed properly. After opening the cover to install the battery correctly you need to place the cover down and gently push the cover on. Turn on the switch to use.

Q: What devices does the PL-31/PL-34 support to install?

A: The PL-31 fits most standard, full-sized, rail-equipped pistols, rifles and shotguns with Picatinny or Weaver rails.

Q: The laser on the PL-31/PL-34 I received is not zeroed, what should I do?

A: Please install the battery first, install on the unit, turn on the laser and adjust the windage and elevation with a wrench to zero the laser.