Feyachi®

PL Compact Laser Sight

User Manual





Caution: avoid shining in eyes

Specification

Output: <5mW

Dimension: 1.74″ L x 0.85″ W x 0.54″ H

Weight: 30g/1.05oz

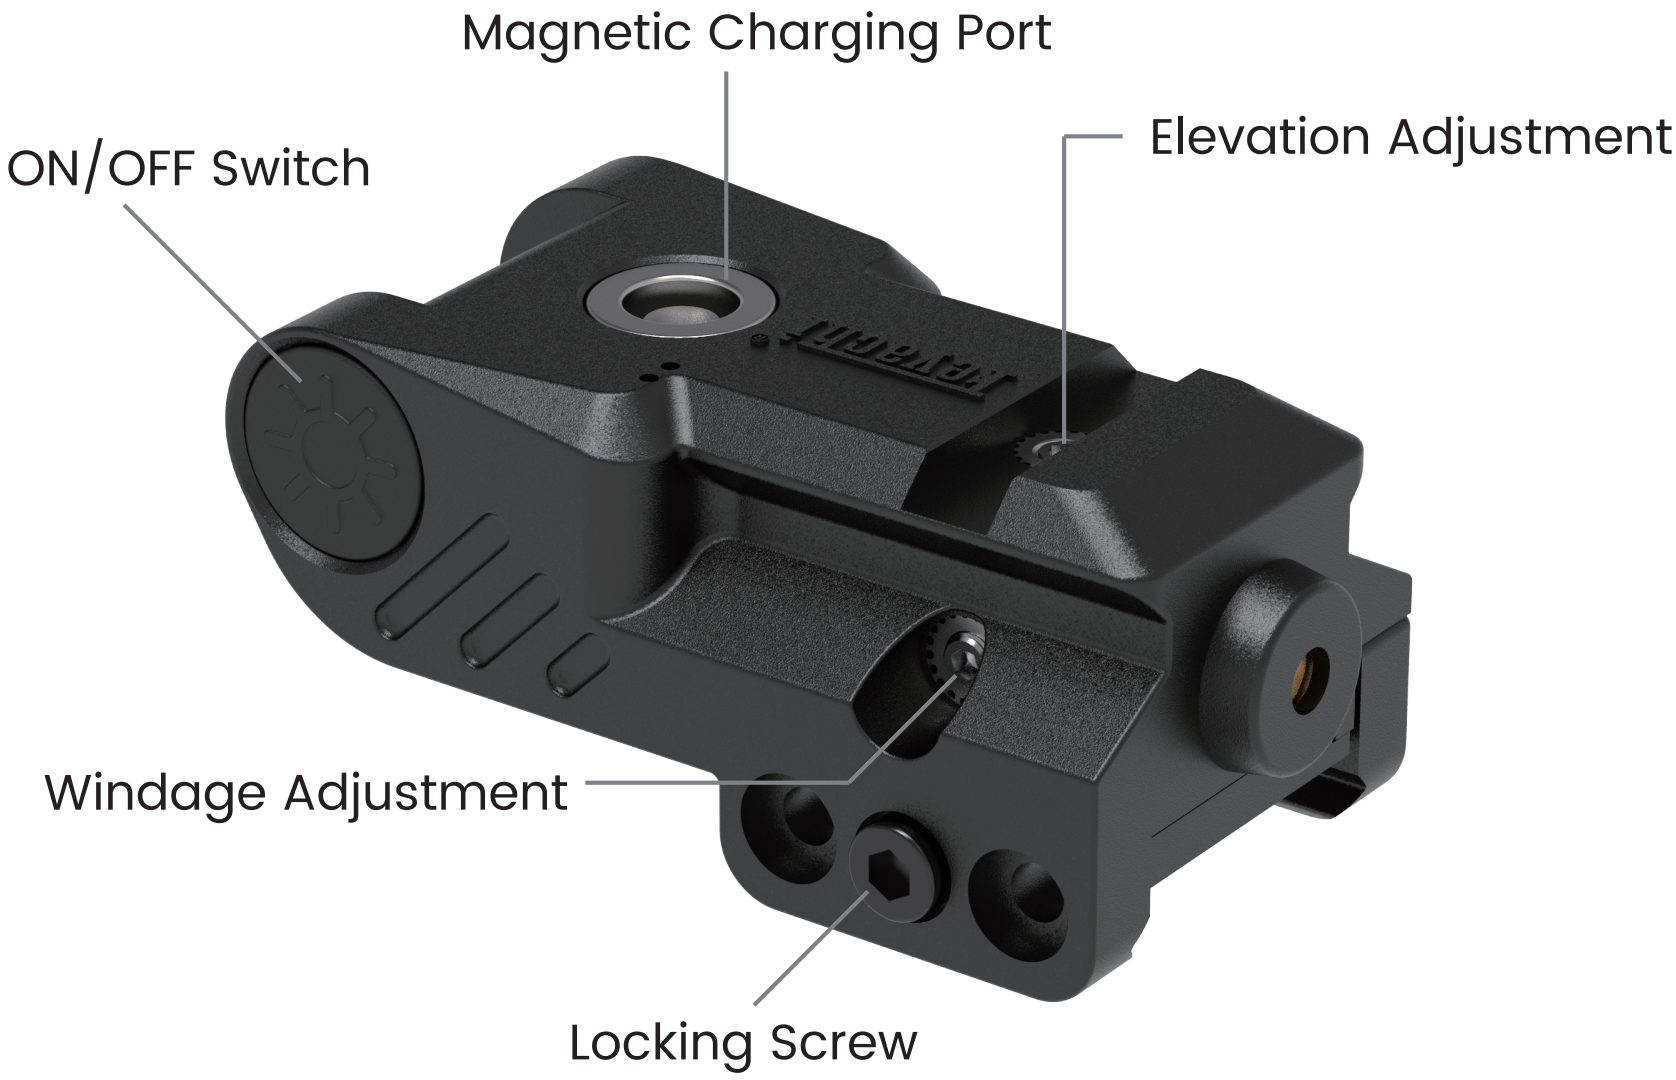
Construction: Military Grade Nylon

Charging Time: 1 Hour

Battery Life: 8Hrs (PL32 Red)/3Hrs(PL22 Green)

Wavelength: 635-655nm(PL32 Red)/
515-525nm(PL22 Green)

Overview


Magnetic Charging Port
ON/OFF Switch
Elevation Adjustment
Windage Adjustment
Locking Screw

Charging

Before first use please fully charge the product.
Connect the USB end of the magnetic charging cable to an external USB power source, then attach the other end of the cable to the charging port at the bottom of the product.



It takes 1 hour to fully charge.
The blue light flashes indicator means charging, while the blue light normally on indicator means charging completed.

Rail Installation

Attach the laser sight to your rail by choosing the screw position best suited for your rail that will allow the sight to be as close to the trigger guard as possible and tighten screw.



ZEROING

After the laser sight is mounted to your rail, you will need to zero in the laser.

1. While following necessary safety precautions, fire five rounds at a target to determine the point of-impact.
2. Using the provided Allen wrench, adjust the laser to the bullet's point of impact.
3. Continue to readjust the windage and elevation until the laser is zeroed.



Windage



Elevation

Inside the Box

PL32 Laser Sight
Allen Wrench
USB Magnetic Charging Cable
User Manual

Warranty

Within 12 months of purchase: Return to Feyachi for repair or replacement. This warranty does not cover normal wear and tear, modifications, misuse, disintegrations, negligence, accidents, improper maintenance, or repair by anyone other than an Authorized retailer or Feyachi itself.

Customer Service

info@feyachi.com
www.feyachi.com
www.facebook.com/feoutdoor


Feyachi®