Feyachi®

GL6 Green Laser Sight

User Manual

INSIDE THE BOX

- GL6 Laser Sight
- Laser Ring Mount (P13 ML87 ML59 ML61 Base on the rail model you ordered)
- Pressure Switch
- CR123A Battery (2)(Non-Chargeable)
- User Manual

WARNING

Before handling the laser sight, read and understand the contents of your Laser manual. Follow all standard safety precautions and procedures during firearm operation, even when the laser sight is not in use.

- NEVER point the laser sight directly at, or into, an eye. This may cause damage to the eye, or blindness.
- Avoid looking directly into the laser.
- Avoid shining the laser into mirrors or other reflective surfaces.
- ALWAYS check the chamber of your weapon is clear before mounting or dismounting the laser sight.
- The laser sight should be tested during periods of non-use to make sure it is still operating properly.

FAILURE to follow standard firearm safety precautions and procedures, as well as the above warnings, is dangerous and may result in serious injury, damage to property, or death.

SPECIFICATION

- Material: Aluminum
- Effective Range Daytime/Nighttime : 50/300 Meter
- Laser Output Power (mW) : ≤ 5mw


- Wavelength: 532nm
- Adjustment Value : 1 MOA
- E/W Adjustment Range (MOA) : 120
- Battery: 1x CR123A
- Dimension (in) : 4.7"x1.6"x1.6"
- Weight (oz) : 4.5oz

BATTERY INSTALLATION

Remove the product from the packaging. Unscrew the tailcap then put the battery in. Make sure that the positive polarity side of the battery faces toward the tailcap. Screw the tailcap back on tightly.

AVAILABLE BATTERIES


1 x CR123A Lithiun Battery

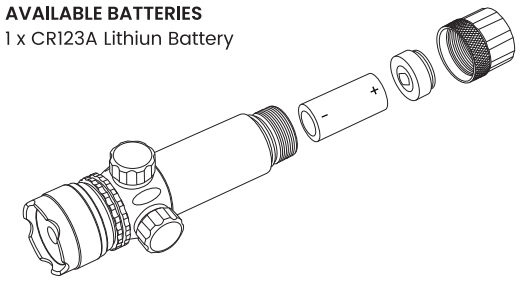


Warning: The included CR123A battery cannot be recharged.

HOW TO OPERATE

Tailcap switch features ON/OFF. Press one time to turn on the sight, press again to shut down.

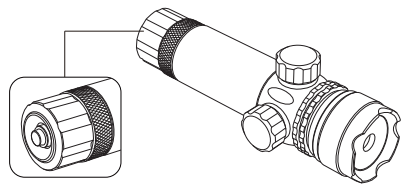


The included pressure switch allows for easy single-handed operation. Comes with a constant on button switch and a momentary on pressure switch (2 modes) for different tactical needs.

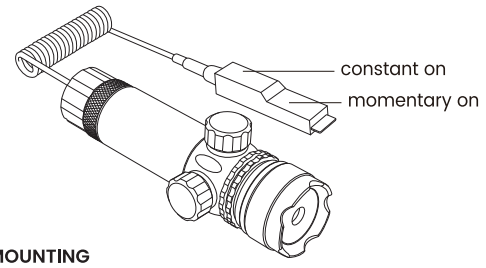


MOUNTING

The rail mount type you get base on the model you ordered. （P13 ML59 ML61 ML87）


With P13 Picatinny 45 degree Rail Mount

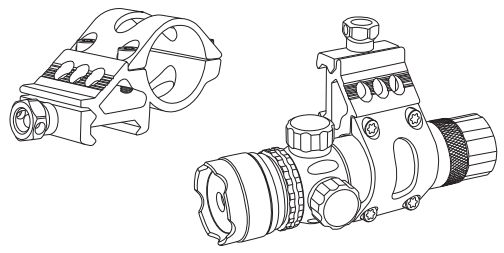

With ML61 M-lok 45 degree Rail Mount

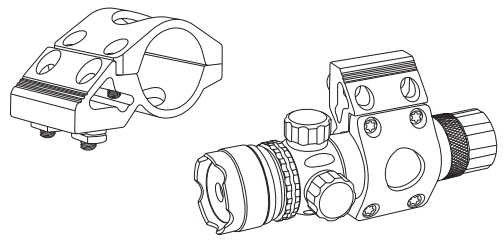


With ML59 M-lok Rail Mount

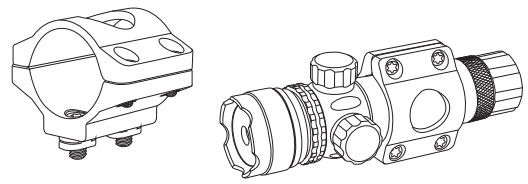

With ML87 M-lok 45 Offset Rail Mount


These rail mounts can also be used for 1 inch flashlight mount.

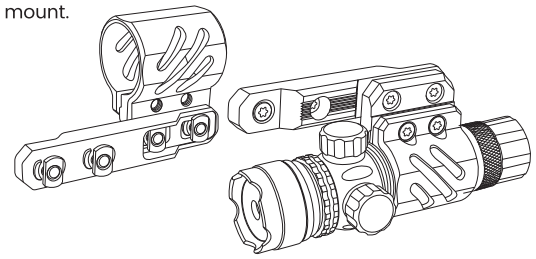


For customers who order the laser sight with ML87 M-lok Offset Rail Mount has detailed user manual as below:

Diverse Mounting Position


Forward Offset

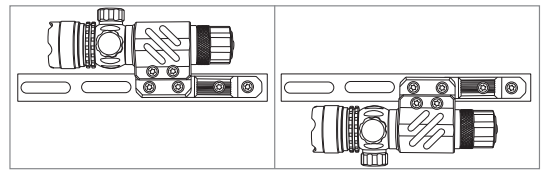

Backward Offset

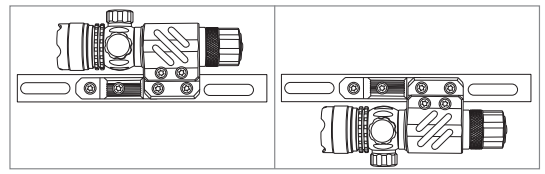


Forward Offset

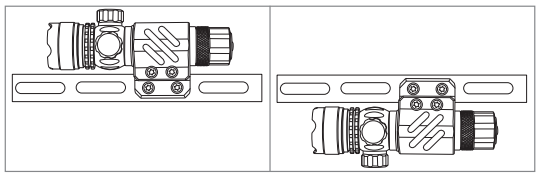


Installation


1. choose one of the mount type. The below installation is based on the forward offset.
2. Connect the screws and nuts through the holes of the offset mount. Keep it loosen but connected.

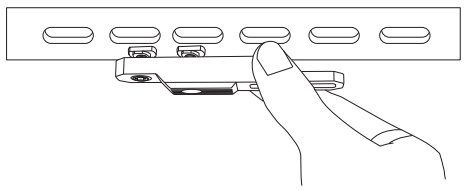


3.Put the nuts into the M-lok rail then tighten the screws with the allen wrench.

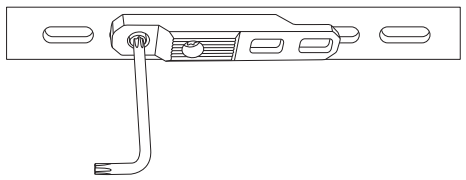


4.Put the ring mount into the offset mount.

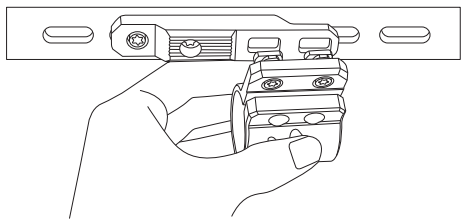


5.Tighten the screws with the allen wrench.

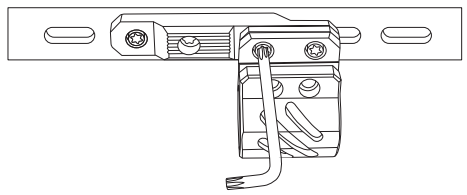

6.Put the laser sight though the ring mount. The 2 inserts are for different diameter laser sights or flashlights.

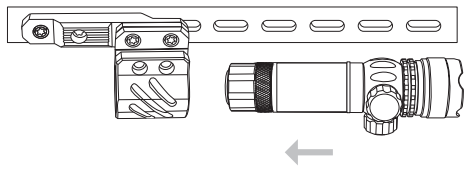


7. Tighten the screws with the allen wrench.

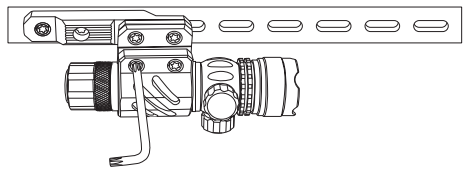

ZEROING THE LASER

Zeroing and test firing should be performed safely on a firing range. Laser boresights are a quick and accurate method to sighting in all weapon sights. If the firearm's optical sight is already zeroed, the laser can be zeroed by aligning the laser dot to the crosshair's center. Adjustments to the laser dot are made by operating the windage and elevation adjustments.

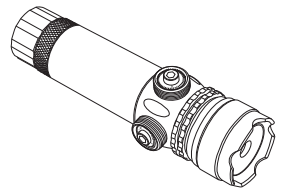

OPERATING WINDAGE AND ELEVATION ADJUSTMENTS

In order to make windage and elevation adjustments:
1. Locate the windage and elevation adjustments.
2. Use the allen wrench to rotate the windage and elevation adjustments to move the alignment of the laser dot. Each click is 1 MOA value, meaning that 1 click moves the point of impact 1 inch at 100 yards or ½ inch at 50 yards.

MAINTENANCE

Proper maintenance of the GL6 Laser is recommended to ensure longevity. It is recommended to remove the battery to ensure the laser will not activate during maintenance procedures. When the sight becomes dirty it should be wiped down with a dry or slightly damp cloth. To clean off dirt, debris, or oils from the laser's aperture, first make sure the laser is deactivated. Unscrew and remove the cap or laser aperature on the front of the sight. Beneath the cap, the laser diode is visible. Apply denatured alcohol to the q-tip first and using small circular motions clean the laser's lens with the q-tip. Allow the alcohol to evaporate.
Afterwards, use your breath to fog the lens. Immediately afterwards use a new q-tip to clean the lens again to remove any residue. No further maintenance is required.

WARRANTY

Within 30 days of purchase: Return to retailer from which you purchased for repair or replacement.

Within 3 years of purchase: Return to Feyachi for repair or replacement. This warranty does not cover normal wear and tear, modifications, misuse, disintegrations, negligence, accidents, improper maintenance, or repair by anyone other than an Authorized retailer or Feyachi itself.

Battery Warranty: Feyachi offers one year warranty for all rechargeable batteries.This warranty does not cover normal wear and tear, modifications, misuse, disintegrations, negligence, accidents, improper maintenance, or repair by anyone other than an Authorized retailer or Feyachi itself.

CUSTOMER SERVICE

info@feyachi.com
www.feyachi.com
www.facebook.com/Feoutdoor/

Feyachi®