
FL Series User Manual

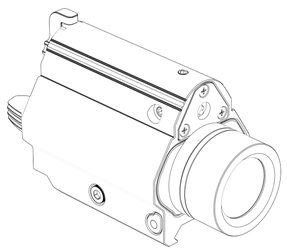

FL-68G
FL-69R

Needing Attention

You are the proud new owner of an FL-69R or FL-68G Tactical Flashlight/Laser Combo that is designed to mount directly to any device that is eauipped with a Weaver Style or Pictainny accessory rail.

This product will last for years to come by simply following these easy instructions.


- Please follow all of the directions in this manual carefully!
- Caution: always practice safe firearms handling!
- Be sure that the firearm is unloaded before performing any of the following procedures!
- Be sure that the firearm is pointed in a safe direction at all times!
- Warning: do not attempt to perform any maintenance or alterations to the tactical flashlight / laser combo beyond what is implied within this manucal. doing so will void the warranty!
- Caution: avoid shining in eyes!

Specification

Sheath Materials: Aluminum Alloy
Processing Technic: CNC Treating
Surface Treatment: Hard Anodizing
Laser Maximum output power: <5mw
FL-68G Wavelength: 520nm
FL-69R Wavelength: 650nm
Size: Width 3.18x1.5x1.95 inch
Weight: 3.17 oz
Switch: Reverse-switching
Voltage: 4.35V
Bulb: 1 x CREE XP-G2 S4
Battery Capacity: 1560 mAh
Battery Type: Rechargeable polymer
Max Output: 1000 Lumens
Runtime: 3-4hours
Irradiation distance: 100m




Product Diagram

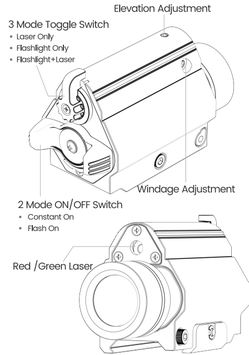


Mode Adjustment

Note: The red laser is used here for demonstration.

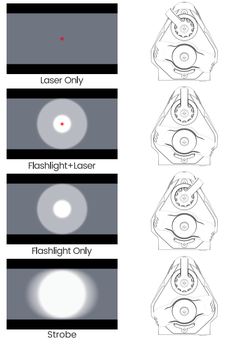

Battery Installation

1. Push the button, the battery will pop out immediately.

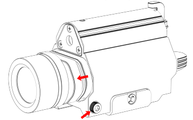

2. The charging port is on the side and can be directly connected for charging. It takes two hours to be fully charged.

Red light means charging is in progress.
Green light indicates charging is complete.



3. The fully charged battery needs to be put back in place. Press and hold the button, press the battery down to complete the installation.

Note: The switch of the battery may be worn after many times press.If the battery can't be put inside, please press the button first and try again.

Mounting

To mount your tactical flashlight/laser onto your weaver style/picatinny rail.

- Grasp the unit by the Main Body. Loosen the screws on the unit's rail.
- Position the unit in front of the rail so the flashlight bezel is facing in the same direction as the muzzle of the equipment.
- Align the grooves on the Tactical Flashlight/ Laser weaver style mount with the grooves on the rail of the equipment.
- Tighten the screws until the unit locks into place.
- Your Tactical Flashlight/Laser is now securely mounted.

WARNING

The Tactical Flashlight/Laser will securely mount on most weaver/picatinny rails, but not all.

(depending on the location of the crossslots on the rail itself.)

Laser Windage/Elevation Adjustments:

To adjust the windage of the Laser, insert the provided Allen wrench into the head of the Windage Adjuster. Turn the Windage Adjuster clockwise to adjust left and counterclockwise to adjust right.

To adjust the elevation, insert the provided Allen wrench into the head of the Elevation Adjuster. Turn the Elevation Adjuster clockwise to adjust down and counterclockwise to adjust up.

After-sale Service

One month exchange for quality problems.
Notices: No appearance scratch and no artificial damage.

One year warranty for guarantee.
Notices: Non-man-made damage for free cost of raw materials and artificial maintenance.