

USER MANUAL

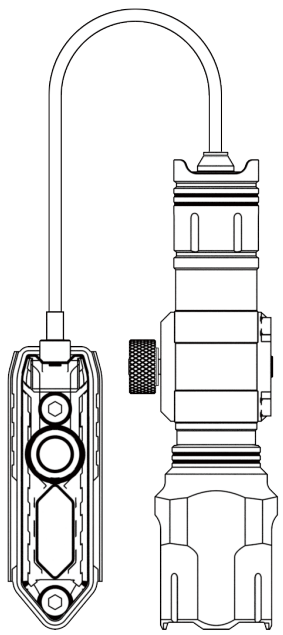


WL25 Flashlight


INSIDE THE BOX




WL25 （with Battery）

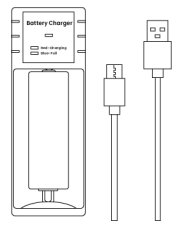

USB Charging Cable & Battery Charger

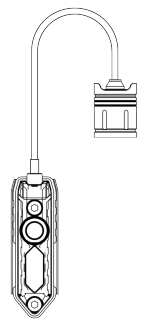

Pressure Switch

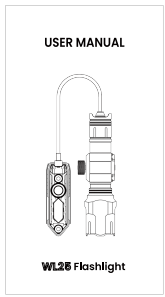

User Manual


SPECIFICATION

- Light Source: White LED technology, impervious to shock with a 50,000 hour lifetime
- Material: 6061-T6 aluminum alloy structure, Type III hard anodizing.
- Size: 5.3(L) x 1.3(W) x 1.7(H) inch
  135.6(L) x 35(W) x 42(H) mm
- Weight: 190g/6.7oz (Including Battery)



200m　　1m　　IP67


PRODUCT OVERVIEW

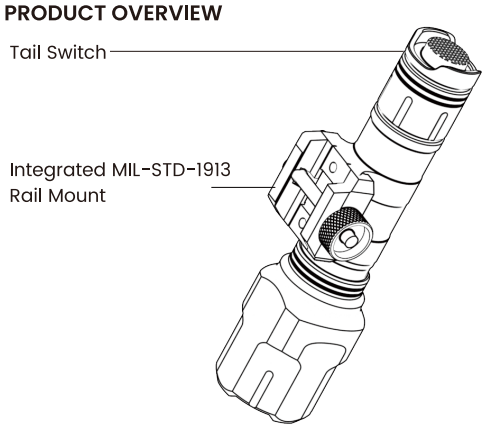

BATTERY INSTALLATION


Remove the product from the packaging. Unscrew the tailcap then put the battery in. Make sure that the positive polarity side of the battery faces toward the direction of the flashlight head (the side of the LED). Screw the tailcap back on tightly.

Available Battery
1 x 18650 Battery

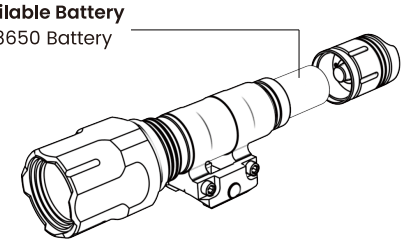

CHARGING

Charge the flashlight before use.
The package includes a intelligent battery charger and a USB to type-C cable for 18650 battery charging. Connect the USB end of the cable to an external USB power source (USB power source is not included in the package. Users can charge it through any USB power source such as a computer or wall adapter). Place the battery to the right position according to the positive and negative polarity indication.
Red Indicator light means charging.
Blue Indicator light means full charge.
Dark Indicator light means the battery was place incorrectly.
Charging time: 3 hrs (for a 2600mAh 18650 battery)

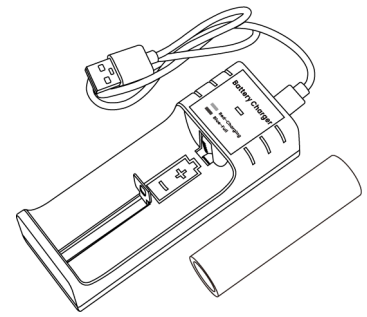


OPERATING MODE

- High/Strobe (Fast double-tap (within 0.4 second) and hold; click to lock on; click again for off)
- High Only
- High/Low (Fast double-tap (within 0.4 second) and hold; click to lock on; click again for off)

The WL25 can be changed to 3 different operating modes by programmable tail switch (Tail Switch Only) for meeting different lighting application needs.


HOW TO CHANGE OPERATING MODE

The default mode of the WL25 is mode 1 (High/Strobe). To change to the next mode, half-tap the switch rapidly 9 times (within 0.4 second per tap) and deep hold the 10th time. Continue holding the switch until the light turns off (approximately 2 seconds), and then release the switch. Repeat this pattern to change to the next program.

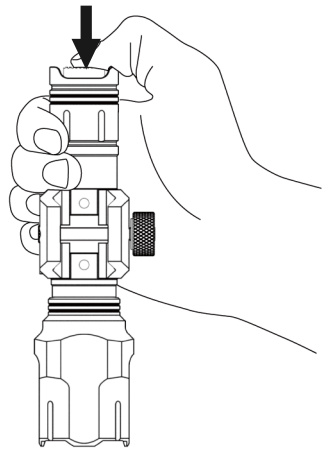

PRESSURE SWITCH

Remote pressure switch features momentary and “constant on” operation.

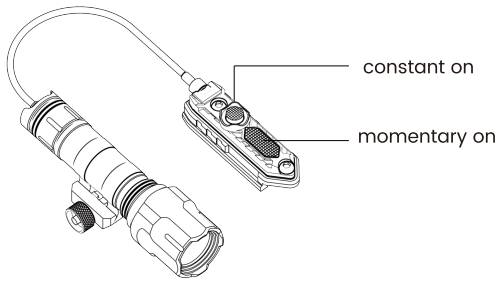

Notice: The Ten-Clip program operating modes changing won’t work on pressure switch.

HOW TO QUICK SWITCH FROM “HIGHT” TO “STROBE” OR FROM “HIGHT” TO “LOW” WITH PRESSURE SWITCH?

Example: **At High/Strobe Mode**


"Momentary On" button

- Press the button and hold, the light delivers high output.
- Quick press the button twice and hold, the light delivers strobe.

“Constant On” button

- Click the button (The button will make the click sound), the light delivers high output.
- When the light stays on high output, quick half-click (The button won't make the click sound) it will deliver constant strobe. For switching back to high, half-press the button (The button won't make the click sound) and hold at least 1 second.

OUTPUT& RUNTIME

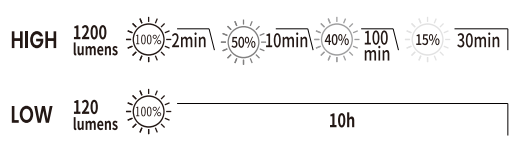

Note: The maximum output brightness varies with the battery level. The tests are performed using the battery included in the light. The light output brightness will decrease as the battery voltage decreases.

WARNING:

- **The body temperature of the WL25 flashlight will reach 60°C（140°F）on High output mode. DO NOT touch the flashlight body at the first 30 mins on High mode to prevent hurting the user’s hand.**
- Keep out of reach of children.
  If the light is about to be put aside for a long time or be transported, please unscrew the tailcap and remove the battery to cut off the circuit.

DANGER

- DO NOT throw the light directly into human eyes. This may cause temporary blindness, or permanent damage to the eyes.
- DO NOT cover the light head when the flashlight is on, or place the light head on the ground. The radiation energy of the light may cause damage to the flashlight itself, or even result in burning to flammable objects.
- DO NOT use Non-protected rechargeable batteries.
- DO NOT immerse the flashlight to water.

WARRANTY

Within 30 days of purchase: Return to retailer from which you purchased for Refund or replacement.

Within 1 years of purchase: Return to retailer from which you purchased for repair or replacement. This warranty does not cover normal wear and tear, modifications, misuse, disintegrations, negligence, accidents, improper maintenance, or repair by anyone other than an Authorized retailer.

THANK YOU!