Feyachi®

Reflex Sight


[RS30 / RS60 / RS61] User Manual

Operating Instructions

For optimum performance and to prevent damage to this precision instrument, carefully follow all instructions.

Contents

Specification 3
Inside the box 3
Product Diagram. 4
How to use 5
Zeroing 7
Elevation & Windage Adjustment . . 7
Lens Care 8
Notice 8
Warranty 8
Contact 9

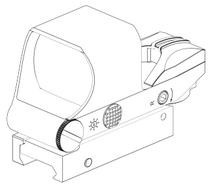

Warning

Unload your equipment before installing or removing your sight.


Specification

Magnification	1x
Objective aperture	40mm
Field of View	15.8@ 100m
Windage/Elevation Click Value	1 MOA per Click
Adj. Range	+/- 45 MOA
Battery	3*LR44
Weight	5.4 oz
Size	3.7″ x 1.7″ x 2.4″
Shake Awake	8 minutes later

Inside the box

1 x Reflex sight
2 x Allen wrench
3 x LR44 (AG13) batteries
1 x Lens cleaning cloth


Product Diagram

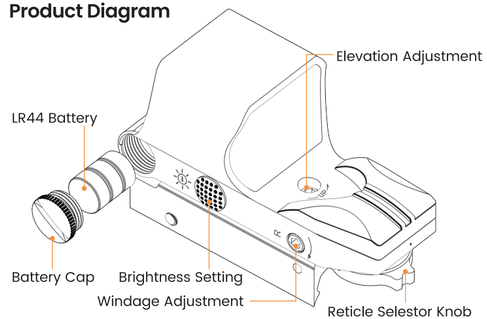

How to use?


1. Install the battery

Place the LR44 batteries into the battery compartment.

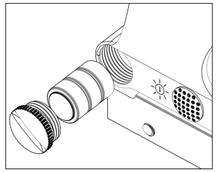

2. Turn on the reflex sight

Press the switch to power up the sight to the last used brightness intensity. Press again to adjust the brightness.

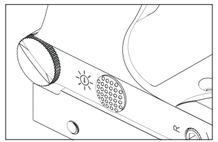

Zeroing


Select the reticle you desire by turning the reticle selector knob and set your intensity at the best position. With the sight mounted, rest the equipment on a solid support and aim at a target 50 to 100 yards away. Test shots should be done in the same conditions to achieve maximum accuracy for adjustment, for which the use of firm rest for firing and same type cartridge is recommendable. Each click adjustment moves the point of impact by 1 MOA (approximately 1"± at 100 yds, 1/2"± at 50 yards)

Elevation & Windage Adjustment

1. Release the locking screw with the allen wrench until loosen.

2. Adjust the elevation and windage to the zero position.

3. Tighten the locking screw until it's locked.

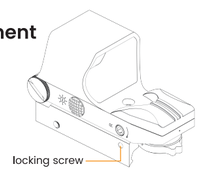

3. Power Off


Press and hold the switch for 2-3 seconds.


4. Auto Off

The is equipped with intelligent power management to prolong battery life when not in use. The sight will automatically off after 1 hour of inactivity.

3. Select the reticle

Dial the reticle selector knob to switch the reticle pattern.

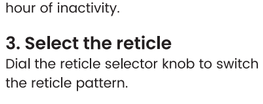

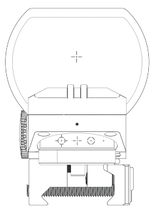

Lens care

The is generally resistant from scratches and common firearm cleaning chemicals. The lens may be covered by dust from normal use. We recommend to use the included microfiber cloth for cleaning.

Notice

Feedback from some customers states that the sights are blurry or it shows double images.Please don't worry,It just need 3-5 minutes to preheat when you first time to use it.(Just turn on and let it stay for 3-5 minutes).Then it will show clearly.

If it still results the same, please do not hesitate to let us know before you low rating, we will try our best to help you out.

Warranty

Within 12 months of purchase: Return to our store for repair or replacement. This warranty does not cover normal wear and tear,

modifications, misuse, disintegrations, negligence, accidents, improper maintenance, or repair by anyone other than an Authorized retailer

Contact

info@feyachi.com
www.feyachi.com
www.facebook.com/Feoutdoor

ABOUT US

committed to the development of cost-effective outdoor tactical equipment, in the pure of cost-effective while providing the highest quality customer service.