Feyachi®

Reflex Sight User Manual

RSL-18 | RSL-88

Laser Parameters

RSL-18 (Red)



RSL-88 (Green)



For Optimum Performance and to Prevent Damage to This Precision Instrument, Carefully Follow all Instructions.


Specification

Magnification	1x
Objective aperture	33mm
Field of View	15.8@100m
Windage/Elevation Click Value	1 MOA per Click
Adj.Range	+/- 30 MOA
Eye Relief	Unlimited
Length	82mm
Battery	1xCR2032
Weight	4 oz
Size	3.2 x 1.5 x 2.1 inch

Inside the box

1 x Reflex Sight with Laser	1 x Cleaning Cloth	1 x CR 2032 Battery
1 x Pressure Switch	1 x Rubber Lens Cap Cover	3 x LR44 Batteries
1 x Velcro Strap	2 x Wrenches	


Diagram

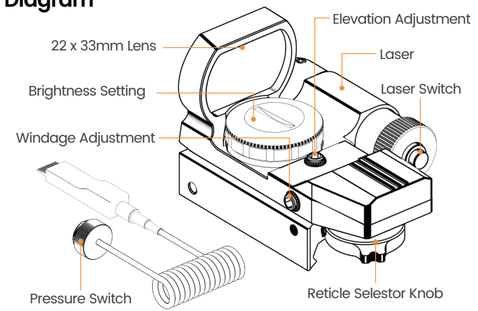


How To Use?

Laser Sight

1. Install the Battery
Place the LR44 Battery Into the Battery Compartment.

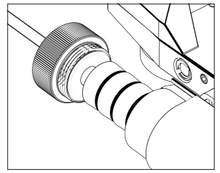


2. Turning the laser sight on / off
Press the tail switch to turn the laser sight on / off, or use the pressure switch to quickly turn it on / off.

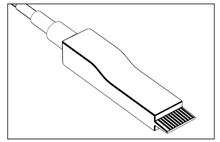


Reflex Sight

1. Install the Battery
Place the CR2032 Battery into the Battery Compartment.

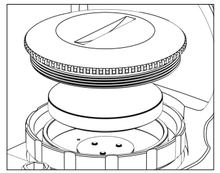


2. Turn on the Reflex Sight
Rotate the Brightness Setting Dial to the Right Setting. The Reticle Will be Reflexed on the Lens.

Turn to " R " or " G " to Power off.

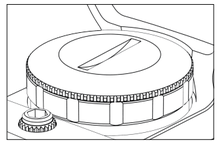

Select the Reticle

Pull the Reticle Selector Knob. There are 4 Reticle Patterns to Choose.

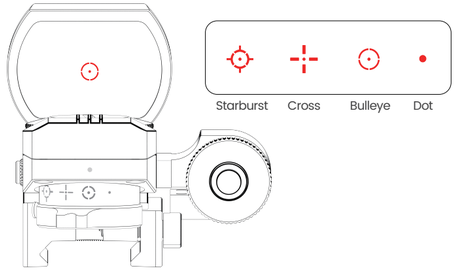

Zeroing

Select the reticle you desire by turning the reticle selector knob and setyour intensity at the best position. With the sight mounted. aim at atarget 50 to 100 yards away. Make sure you have calibrated all foroptimum performance and aim, for which the use of firm rest for firingand same type cartridge is recommendable. ach click adjustmentmoves the point of impact by I MOA (approximately 1"± at 100 yds, 1/2"± at 50 yards)


Elevation & Windage Adjustment

1. Release the locking screw with theallen wrench until loosen.
2. Adiust the elevation and windageto the zero position.
3. Tighten the locking screw until it's locked.




Laser Zeroing

1. With the sight mounted. Make sure you have calibrated all foroptimum performance and aim.
2. Using the provided Allen wrench, adjust the laser to the point ofimpact.
3. Continue to readjust the windage and elevation until the laser iszeroed.

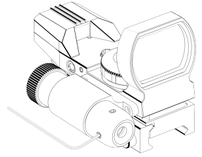

Windage Adjustment

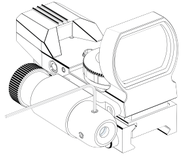

Elevation Adjustment

Notice

Feedback from some customers states that the sights are blurry or itshows double images.Please don't worry,It just need 3-5 minutes topreheat when you first time to use it.(Just turn on and let it stay for3-5 minutes).Then it will show clearly.If it still results the same, please do not hesitate to let us know before you low rating, we will try our best to help you out.

Warranty

Within 12 months of purchase: Return to Feyachi for repair orreplacement. This warranty does not cover normal wear and tear.modifications, misuse, disintegrations, negligence, accidents, impropermaintenance, or repair by anyone other than an Authorized retailer orFeyachi itself.

Contact

info@feyachi.com
www.facebook.com/feyachistore
www.feyachi.com
(1)877-734-1687