


Specification


Output: <5mW
Dimension: 1.25″ L x 1.24″ W x 1″ H
Weight: 1.2 oz
Construction: 6061 T6 Aircraft Aluminum Alloy
Finish: Anodized Matte Black
Battery Type: LR41(6)
Battery Life: 2 Hrs
Wavelength:(Red)635-650nm/(Green)515-525nm

Overview

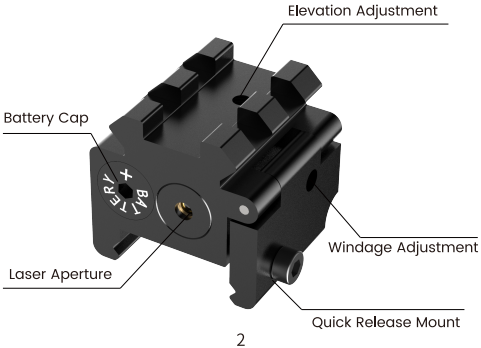

Battery Installation


Unscrew the battery cap with the provided pick, insert 3 LR41 batteries.

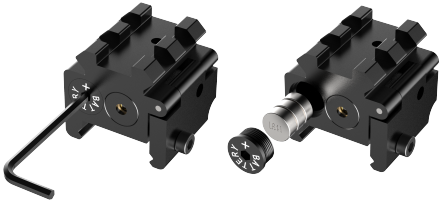

ZEROING

After the laser sight is mounted to your weapon, you will need to zero in the laser.

1. While following necessary firearm safety precautions, fire five rounds at a target to determine the point of impact.
2. Using the provided Allen wrench, adjust the laser to the bullet's point of impact.
3. Continue to readjust the windage and elevation until the laser is zeroed.

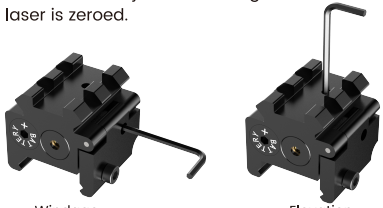

Windage Elevation

Inside the Box

Laser Sight
Allen Wrench(2)
LR41 Battery(6)
User Manual