
裁切线　压线

Feyachi®

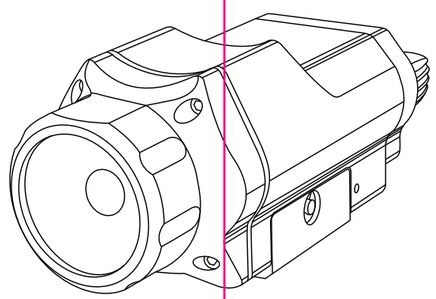

HL20 USER MANUAL

CAUTION

HOT The HL20 provide a powerful beam. When operated for a long time, it will get uncomfortably warm. This is NORMAL and is not a defect. Any LED flashlight of similar size and performance will produce similar amounts of heat during operation. The only way to reduce operating heat is to SIGNIFICANTLY lower the output, or increase the size of the flashlight. While this heating may trigger the drop reflex if an unattended hot light is picked up, the temperature does not present a burn hazard. When used tactically for short periods of time to clear a room, check for intruders, etc., heating will not be a problem.

Failure To Read and Follow These Operating Instructions and Warnings When Handling a Firearm Orthe HL20 Can Be Dangerous.

May result without proper training in the safe handling. Proper training should be obtained from an accredited program conducted by competent, qualified instructors in the military, police academies or National Relevant associations affiliated instruction programs.

• Read your firearm's manual before attaching your equipment mounted light.

• Never point the HL20 at a person's eyes to avoid effects on vision.

• We recommends that the HL20 should only be activated with the non-trigger hand while employing and with the trigger finger outside the trigger guard when possible. Failure to do so may result in accidents such as misfires.

• Thoroughly practice (employing safe training conditions) with the HL20 before using the weapon in a tactical situation.

Before installing, checking maintenance, or repairing the HL20, please check the safety of your equipment to avoid accidents, and confirm the safety before operating the HL20. Remove the HL20 from the rail/equipment if necessary.

IT IS IMPERATIVE THAT SAFETY MEASURES BE EMPLOYED AT ALL TIMES WHILE HANDLING THE INSTALLATION

INSIDE THE BOX

HL-20 Tactical Flashlight
CR123A Battery (4)
Metal Sheet
Rail Keys (4)
Allen Wrench


SPECIFICATIONS

Sheath Material: Aluminum Alloy
Processing: CN CTreating
Surface Treatment: Hard Anodizing
Brightness: 1500LM(Lumen value decreases with hours of use)
Illuminating Range: 200m
Water-Resistant Rating: IPX5
Battery Life: 2 hrs(Free set of batteries)
Battery: CR123A(4)
Size: 3.4″ (L)x1.5″ (W)x1.5″ (H)
Weight: 4.7oz (With Battery)


BATTERY INSTALLATION/REMOVAL

THE HL-20 MUST BE REMOVED FROM THE EQUIPMENT BEFORE THE BATTERY COMPARTMENT CAN BE OPENED OR CLOSED.


1 - Unlock (Apply force and push latch toward key until latch touches body, then swing the door open)

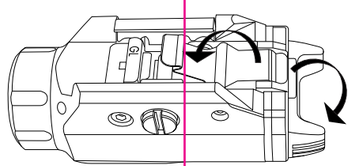

2 - Replace Batteries (Polarity is indicated on body of flashlight)

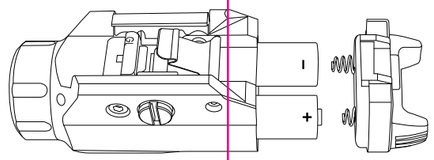


3 - Lock (Latch will stop against top of door)

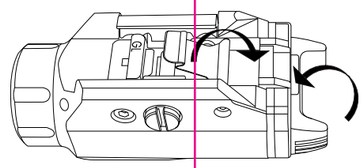


RAIL KEYS

Four polymer rail keys (included) allow the HL-20 to be attached to a variety of equipment: GL - Glock or "universal" rails, SW - TSW & 99, Beretta - 90two, Sig – P320, 1913 - Mil Std-1913(Picatinny).

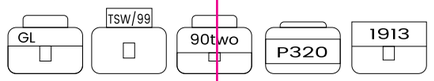

Each rail key is stamped for easy identification and the keys share a common key screw.

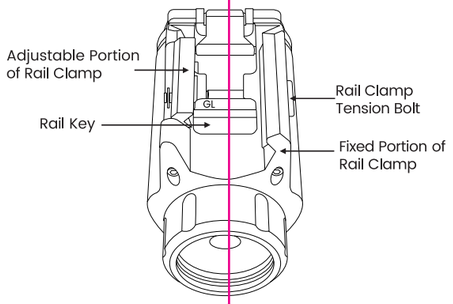


MOUNTING/REMOVAL PROCEDURE

MAKE SURE THAT THE EQUIPMENT IS UNLOADED AND THE BREECH IS OPEN. IT IS IMPERATIVE THAT SAFETY MEASURES BE EMPLOYED AT ALL TIMES WHILE HANDLING THE FIREARM.


1. Loosen the rail clamp tension bolt.

2. Angle the HL-20, placing the fixed portion of the rail clamp against the accessory rail and align the rail key with the appropriate cross groove in the accessory rail.

3. Depress the tension bolt to open the rail clamp, rotate the HL-20 into place and release the pressure on the tension bolt to "snap" the light in place.

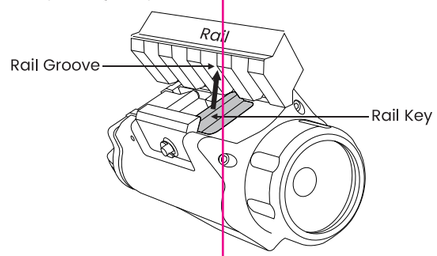

Switch Operation

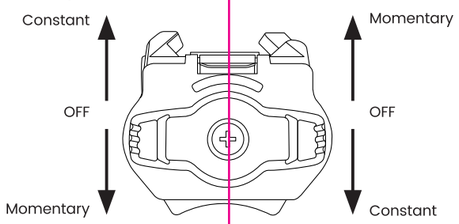

WARRANTY

Within 12 months of purchase Return to us for repair or replacement. This warranty does not cover normal wear and tear, modifications, misuse, disintegrations, negligence, accidents, improper maintenance, or repair by anyone other than an Authorized retailer.

Customer Service

www.facebook.com/Feoutdoor/
info@feyachi.com
www.feyachi.com
Customer Service Team: (1)877-734-1687